


Rear Cargo Box Installation Guide

STEP 1

Remove the following four screws.

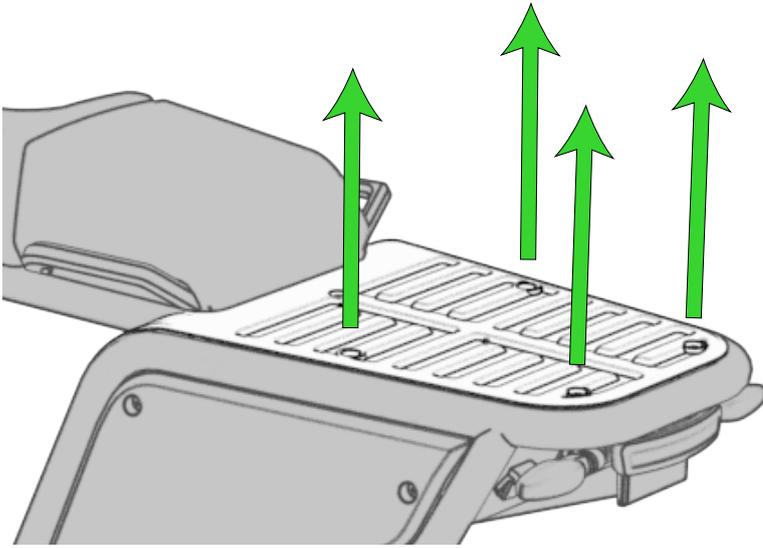


STEP 2

Place the metal adapter on top of the rear rack cover.

Make sure the holes of the rack are aligned with the screw holes you have removed.

The four screws that were removed in Step 1 should be reinserted into their original positions.

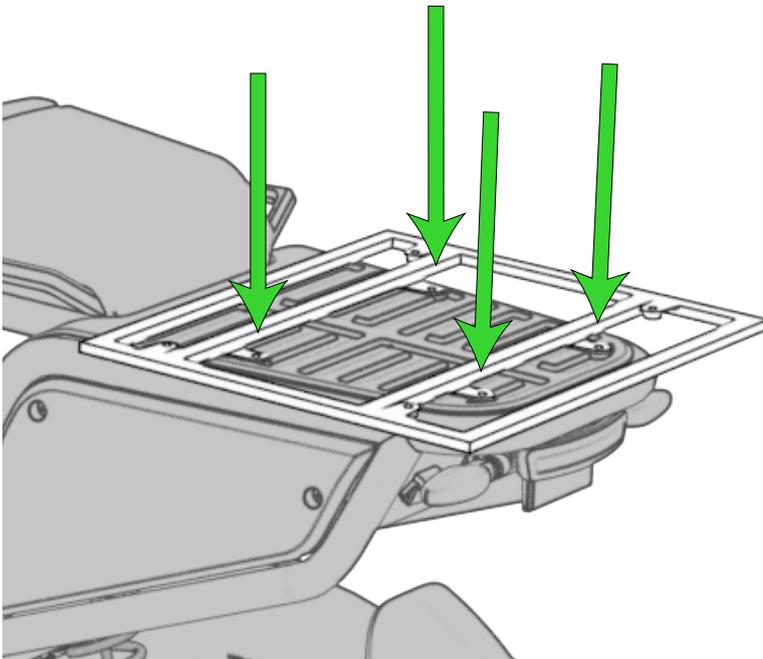

STEP 3

Place the cargo box on top of the metal adapter. Open the box lid and use the supplied screws to secure the cargo box to the metal adapter.

